## How to Change Language on Pioneer Carrozzeria Avic mrz07, mrz05,mrz09,mrz99


## Requirements:

- 1. SD Card
- 2. .LNG file To be downloaded

## Steps:

- 1. Create 2 folders on your SD card. Name folder 1 as 'BackupFile' and Folder 2 'LanguageFile'
- 2. Copy the language file to folder LanguageFile Link to download .LNG file below:

https://github.com/btua/Pioneer-Carrozzeria-Avic-MRZ-Series-ENG

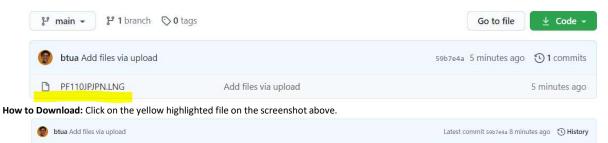

83.1 contributor Download ☐ ☐

Click on download button highlighted. Now we have the .LNG file.

Copy the downloaded file to your SD Card LanguageFile folder we created.

Note: This file already exists in the Pioneer System. We shall replace the existing one with the file that we have downloaded. Do Not change the name of the file.

- 1. On your Car Pioneer System:
- 2. Insert your SD Card


While holding the NAVI Button, Press Prev & Nxt Trk Buttons 6 times (right..left..right..left..right..left.) to get into testmode NAVI Button(Long press/Hold)

現在地

Nxt & Prev Trk Buttons (Press alternatively 6 times (right..left..right..left..right..left )while holding NAVI Button)



Wait for a few seconds for it to load, the logo will appear first then the testmode as below.

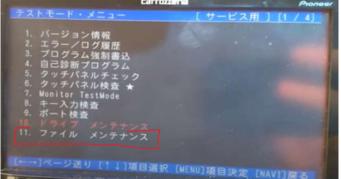

Go to the last entry Item 11 (highlighted in Red in Screenshot above) on the first page (File Maintenance in Japanese) and press MENU (right button with Japanese writing on it) This opens the file manager which is in English and fairly obvious.

--Make a backup of /USER (Copying and pasting to /SD/BackupFile)

Look in /USER to see if there is a file named PRG.FLG

If there is, then the system uses /USER/PRG1, otherwise it uses /USER/PRG0  $\,$ 

You can check the file versions by looking at /USER/PRGx/PF090APL.HTM (where x is 0 or 1 depending on PRG.FLG)

Go to /USER/PRGx/APL/LANGDATA/

Delete PF090JPJPN.LNG

Go to /SD/LanguageFile, copy the new PF090JPJPN.LNG and paste it into LANGDATA where the old one was (/USER/PRGx/APL/LANGDATA/).

Switch off the power and when it restarts, it should be in English  $\,$ 

Note: Be very careful in the file manager.